

# Ultrasave's BC Hydro Approval List

## T8 BALLASTS

Model	Input Volts	Starting Method
<b>1 lamp</b>		
ST132120	120	I
SR132120	120	P
UT132120	120	I
UT132120M	120-277	I
UT132347	347	I
UT132120MH	120-277	I
UT132347H	347	I
UT132347L	347	I
UT132120L	120	I
PR232120M-PP-HE	120-277	P
PR432347-PP-HE	347	P
<b>2 lamp</b>		
eT232120M	120-277	I
UT232120M	120-277	I
UT232120	120	I
ST132120	120	I
ST232120E	120	I
SR232120	120	P
UT232120	120	I
UT232120M	120-277	I
UT232347	347	I
UT332120	120	I
UT332120M	120-277	I
UT332347	347	I
UT260120	120	I
UT26120M	120-277	I
UT260347	347	I
UT232120ML	120-277	I
UT232120MH	120-277	I
UT232347L	347	I
UT232120MH	120-277	I
UT232120M-HE	120-277	I
UT232347H	347	I
UT232347HE	347	I
PR232120M-PP-HE	120-277	P
PR232347-PP-HE	347	P

I - Instant Start

P- Programmed Start

# Ultrasave's BC Hydro Approval List

## T8 BALLASTS

Model	Input Volts	Starting Method
<b>3 lamp</b>		
UT332120	120	I
UT332120M	120-277	I
UT332347	347	I
UT432120	120	I
UT432120M	120-277	I
UT432347	347	I
UT332120MH	120-277	I
UT332120ML	120-277	I
eT432120M	120-277	I
UT332120M-HE	120-277	I
UT332347H	347	I
UT332347L	347	I
PR432120M-PP-HE	120-277	P
PR432347-PP-HE	347	P
<b>4 lamp</b>		
UT432120ML	120-277	I
UT432120	120	I
UT432120M	120-277	I
UT432347	347	I
UT432120L	120	I
UT432347L	347	I
UT432347HE	347	I
eT432120M	120-277	I
GTL432120	120	I
UT432120M-HE	120-277	I
UT432120MH	120-277	I
PR432120M-PP-HE	120-277	P
PR432347-PP-HE	347	P

I - Instant Start  
P- Programmed Start

# Ultrasave's BC Hydro Approval List

## Magnetic HID Ballasts

Model	Input Volts	Rated Lamp Watts
High Pressure Sodium		
HD70-S62	120/277/347	70
HD100-S54	120/277/347	100
HD150-S55	120/277/347	150
HD250-S50	120/277/347	250
HD400-S51	120/277/347	400
Metal Halide		
HD250-M138	120/277/347	250
HD400-M135	120/277/347	400